



**MUVEACOUSTICS®**  
SOUND THAT INSPIRES

## WARRANTY CARD

### USER MANUAL AND WARRANTY



Wireless Speaker

### Bluetooth Connection

Device with Bluetooth 4.2 wireless technology equipped computers, smartphones and MP3 players.

To use Bluetooth for your audio connection, first pair the BOX (device name 'MUVEACOUSTICS: BOX') with your audio source (music player, smartphone, laptop or other Bluetooth equipped device that can act as audio source). Make sure BOX is fully charged and turn it on by sliding the On/Off switch at the back of the speaker to "ON". Once the power is turned on, the BOX is in Bluetooth mode if there is no USB flash drive or micro SD/TF card inserted. You can hear a voice notification - "Bluetooth mode" and the blue LED is blinking quickly. Make sure Bluetooth is enabled on your audio source, search for available devices and in a few moments "MUVEACOUSTICS: BOX" will appear on your list of possible Bluetooth connections. Press "pair" or "connect" on your device and after the connection is made, the blue LED will stop blinking and you can hear "connected". Then your device is paired.

From now on, when you turn on BOX to Bluetooth mode, it will automatically search for the last Bluetooth device it was paired with. If you want to cancel the connection, just press and hold the "M" button for 3 seconds and you can hear "disconnected". While there is no pairing with Bluetooth device within 10 minutes, BOX will turn off automatically and you need to switch off and switch on again for further use.

### FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### MUVEACOUSTICS® ONE-YEAR LIMITED WARRANTY

MUVEACOUSTICS® BOX speaker have been subjected to a thorough series of tests to ensure the highest level of dependability. It is unlikely that you will experience any problem, but if a defect should become apparent during the use of this product, MUVEACOUSTICS® warrants to the original purchaser that this product will be free from defects in material and workmanship for a period of 12 months from the date of your original purchase from an authorized dealer. If a defect covered by this warranty occurs, MUVEACOUSTICS®, at its option, will repair or replace the product purchase at no repair charge (postage charges will apply). If a replacement is necessary and your product is no longer available, a comparable product may be substituted at the sole discretion of MUVEACOUSTICS®.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship. This warranty does not apply to product used for any industrial, professional or commercial purposes.

For service on any defective under 12 months warranty policy, please contact Consumer Support.

Email: [consumersupport@zeeva.com](mailto:consumersupport@zeeva.com)  
Telephone Number: 022-67368877

Keep all relevant information for future reference

Designed by:



[www.muveacoustics.com](http://www.muveacoustics.com)

Imported and distributed  
by Zeeva Electronics Private Limited.  
All rights reserved.

901-902, Trade World C wing  
Kamla Mill Compound  
Senapati Bapat Marg, Lower Parel West  
Mumbai-400013

Design, logo and wordmark are intellectual properties of Butani Group Limited.

### Caution




Changes or modifications not expressly approved by the party responsible for the compliance could void the user's (or your) authority to operate the equipment. Avoid storage in extreme heat or cold. Avoid extreme temperatures and high humidity. The product's working temperature range is 0°C to 50°C (32°F to 122°F).



The input voltage to the product is 5V 1A. In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger / adapter for charging the product. Only charge the product at ambient temperatures between 10 deg °C / 50 deg °F and 40 deg °C / 104 deg °F. Do not heat above 70 deg °C / 158 deg °F. Do not expose to sunlight or throw into fire. Switch off the product after use.

Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

This device has been tested and complies with part 15 of the FCC rules.  
FCC ID: 2ANVW-MA-2005

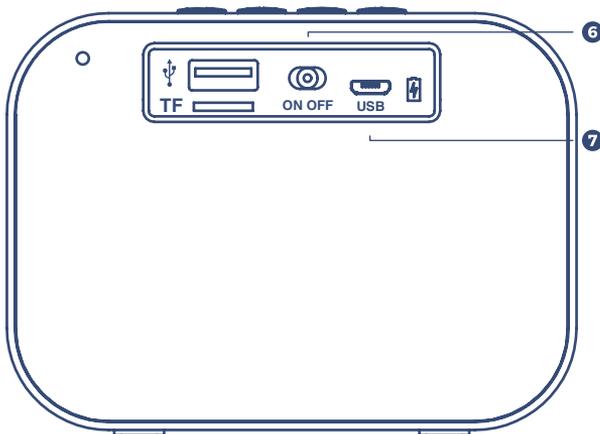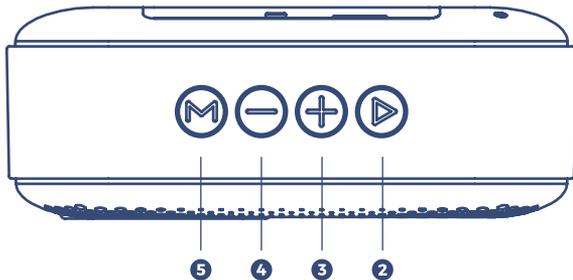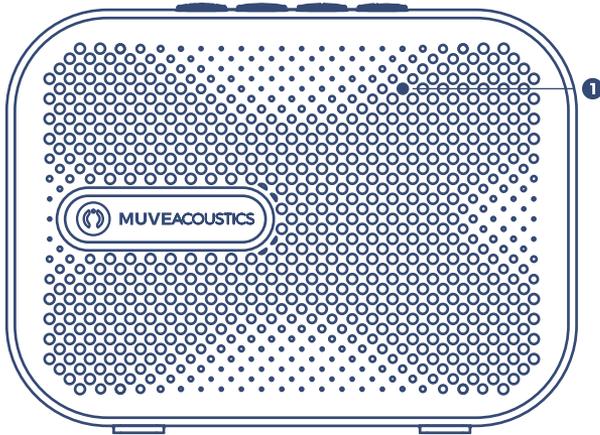

**1 Bluetooth Sync Indicator**

Bluetooth LED blinks quickly in blue when ready to pair. Bluetooth LED will be solid blue when the device is paired. Bluetooth LED blinks slowly when playing songs.

**2 Play/Pause**

You can play and pause your music using the Play/Pause button in Bluetooth mode and MP3 mode.

**3 Volume Up**

Press and hold "+" button to increase volume.

**Next Song**

Press and release the "+" button quickly to skip to next song.

**4 Volume Down**

Press and hold "-" button to decrease volume.

**Previous Song**

Press and release the "-" button quickly to skip to previous song.

**5 Mode**

Press and release the Mode button once, BOX will change its mode with corresponding voice notification.

**6 Power**

Slide the On/Off switch at the back of BOX to turn the power ON or OFF respectively. You can hear a voice notification of "Bluetooth mode" if there is no USB flash drive or micro SD/TF card inserted. You can hear a voice notification of "MP3 mode" if an USB flash drive or micro SD/TF card with MP3 audio files is inserted to the USB port or TF slot.

**7 Micro USB Port**

Micro USB port for charging BOX. (Cable included)

**Micro SD/TF Card and USB Flash Drive**

When you insert micro SD/TF card or USB flash drive, BOX will switch to MP3 mode with voice notification and play the music automatically. Music can be controlled by pressing the Play/Pause, "+" (for skip to next song) and "-" (for skip to previous song). Press and hold the "+" or "-" button for increasing or reducing volume respectively.

**FM Radio**

Connect the USB charging cable to the charging port as an antenna and press the mode button until BOX is changed to Radio mode with a voice notification - "radio mode". Press the Play/Pause button once, the BOX can search all the FM radio channels automatically and you can search the channels one by one yourself by pressing "+" or "-" button once. Press the Mode button repeatedly, BOX will switch between Bluetooth mode, MP3 mode and radio mode cyclically.

**Speakerphone**

You can use the BOX as a portable speakerphone for incoming calls when connected wirelessly via Bluetooth. Use BOX integrated microphone to speak. To answer a call, press the Play/Pause button once and talk as you use your mobile phone. To end a call, press the Play/Pause button once again. To refuse a call, press and hold the Play/Pause button for 2 seconds. To re-dial the last number called by press the Play/Pause button twice.

**Please Note:**

BOX comes with lithium-ion polymer battery. For best result, fully charge BOX before use. It will take 2 hours to fully charged. To charge, plug the micro USB connector of the charging cable into BOX and plug the standard USB connector into your power source. While BOX is power off and being charged, the LED indicator will be in solid red. BOX can be charged while working. The battery will be charged till the charging process completed. BOX will be powered by the DC power source directly and the battery will be in sleep mode after it is fully charged.